

# General View

## Spare part list

Your tool is composed of:

- A **DU (Driving Unit)** = Standard Desoutter tool+ an adaptor,  
= Or a Standard Desoutter tool + an Angle Head 110° + an adaptor,
- One or several **GFA** (Geared Front Attachment)
- Additional items depending of your configuration:
  - o Hold and Drive and relevant Adapter
  - o ...

To find the spare part you are looking for, navigate from one to the other views.



**EABC32-410-DU-CO**

Driving Unit



**GFA-COT**

GFA



**Adapter**

Additional item:  
GFA/Hold&Drive  
adapter



**Hold And Drive**

Additional item:  
Hold&Drive

### Few tool examples:



### Driving Unit example: Standard Desoutter tool + tool adapter



### GFA examples



Closed-Ended  
Crowfoot



Open Ended  
Crowfoot

Ref.no.	Ordering No.	Qty	وصف	Remark / included in Service kit
	6150602500	1	ELS12-400-P4Q-CCW-DU	
	3512130084	1		0
	3512313680	1		1
	3512820581	1		2

Parts without ordering number are not delivered separately for technical reasons. The use of other than genuine Desoutter replacement parts may result in decreased tool performance and increased maintenance and may, at the company option, invalidate all warranties.